

UNO S F™

Concentrated Cleaner and Degreaser

⇒ Foamless Formulation

UNO S F™ is an aqueous based high strength degreaser which uses advanced cleaning technology to deliver outstanding performance. The excellent dissolving property of UNO S F™ allows the product to achieve optimal results at the operating temperatures of your cleaning equipment. UNO S F™ is a foamless formulation which makes it ideal for applications where foaming could interfere in the cleaning process.

Features & Benefits:

- High strength concentrate, economical to use
- Can be diluted up to 1:40 to suit all cleaning needs
- Ideal for trigger sprayer applications, hot parts washers, ultrasonic baths, dip tanks, floor cleaners and pressure washers
- Optimal cleaning temperature between 45-65°C (113-149°F)
- Can be heated up to 90°C (194°F)
- Removes oils, greases, organic contaminants, pigment coating, markers, smoke, dust, carbon deposits, etc.
- Built in corrosion inhibitors to prevent flash rusting
- Water-based, non-flammable, VOC free
- NSF registered under category code A1, registration no. 142609
- Solvent, phosphate and butyl-free
- **UNO S F™** is a foamless formulation
- Also available in foamy version (**UNO S™**)



Description	Size		Order No.	MSDS
	Metric	Imperial		
Sprayer	500ml	16.9 fl. oz.	53-G 023	L-48E
Liquid	3.78L	1 gal.	53-G 016	L-48E
Liquid	20L	5.2 gal.	53-G 017	L-48E
Liquid	208L	55 gal.	53-G 018	L-48E
Liquid	1000L	264 gal.	53-G 019	L-48E

ACCESSORIES

Spout for 5L pail	53-L 113
Spout for 20L pail	53-L 207
Faucet for 208L drum, 2"	53-L 209
Faucet for 208L drum, ¾"	53-L 210
Replacement trigger sprayer, 500 ml	53-L 315
Replacement trigger sprayer, 950 ml	53-L 158

Technical Information

Density	1.04 g/ml (at 68°F)
Flashpoint	N/A
Odor/color	Mild odor, light pink
pH (at 100g/L H₂O)	12.5
Rinsability	Excellent
VOC	0% wt

(M)SDS available upon request or visit our web site at www.walter.com

Not for product specification. The technical data contained herein is intended as reference only and may change without notice

UNO S F™

Concentrated Cleaner and Degreaser

⇒ **Foamless Formulation**

Application dilution chart:

Equipment	Dilution ratio	Dilution %	Application	Material
Trigger sprayers	1:40 - 1:30	2,5% - 3,3%	Removal of light organic contaminants	Aluminum and Non-Ferrous Alloys, Plastics
Trigger sprayers	1:40 - 1:10	2,5% - 10%	Removal of light organic contaminants	Steel, Stainless Steel, Plastic
Trigger sprayers	1:10 - Pure	10% - Pure	Removal of heavy organic contaminants	Steel, Stainless Steel
Ultrasonic baths	1:40 - 1:30	2,5% - 3,3%	Removal of light organic contaminants	Aluminum and Non-Ferrous Alloys, Plastics
Ultrasonic baths	1:40 - 1:10	2,5% - 10%	Removal of light to heavy organic contaminants	Steel, Stainless Steel, Plastics
Ultrasonic baths	1:10 - Pure	10% - Pure	Removal of heavy organic contaminants	Steel, Stainless Steel
Floor washing machines	1:30 - 1:10	3,3% - 10%	Maintenance and degreasing of floors	Tiled Floors, Hard Floors, Concrete, Epoxy Coated Floors, Linoleum, etc.
Pressure washers	1:40 - 1:30	2,5% - 3,3%	Pressure washing	Aluminum Truck Bodies, Vehicle Bodies, Siding
Pressure washers	1:30 - 1:20	3,3% - 5%	Pressure washing	Truck and Vehicle Bodies, Floors, Walls, Vinyl Sidings, etc.
Hot parts washers	1:40 - 1:30	2,5% - 3,3%	Cleaning and degreasing of parts with light organic contaminants	Aluminum and Non-Ferrous Alloys, Plastics
Hot parts washers	1:40 - 1:10	2,5% - 10%	Cleaning and degreasing of parts with light to heavy organic contaminants	Steel, Stainless Steel, Plastic
Hot parts washers	1:10 - Pure	10% - Pure	Cleaning and degreasing of parts with heavy organic contaminants	Steel, Stainless Steel
Dip tanks	1:10 - Pure	10% - Pure	Soaking of light and heavy organic contaminants	Steel, Stainless Steel

Dilution Chart

Dilution ratio	Dilution %	ml of cleaner/ 1L of water	fl. oz. of cleaner/ 1 gal of water
1:40	2,5%	25ml	3,2 fl. oz.
1:30	3,3%	33ml	4,3 fl. oz.
1:20	5%	50ml	6,4 fl. oz.
1:10	10%	100ml	12,8 fl. oz.
1:5	20%	200ml	25,6 fl. oz.
1:2	50%	500ml	64 fl. oz.

(M)SDS available upon request or visit our web site at www.walter.com


Not for product specification. The technical data contained herein is intended as reference only and may change without notice

UNO S F™

Concentrated Cleaner and Degreaser


⇒ Foamless Formulation

Titration curves:

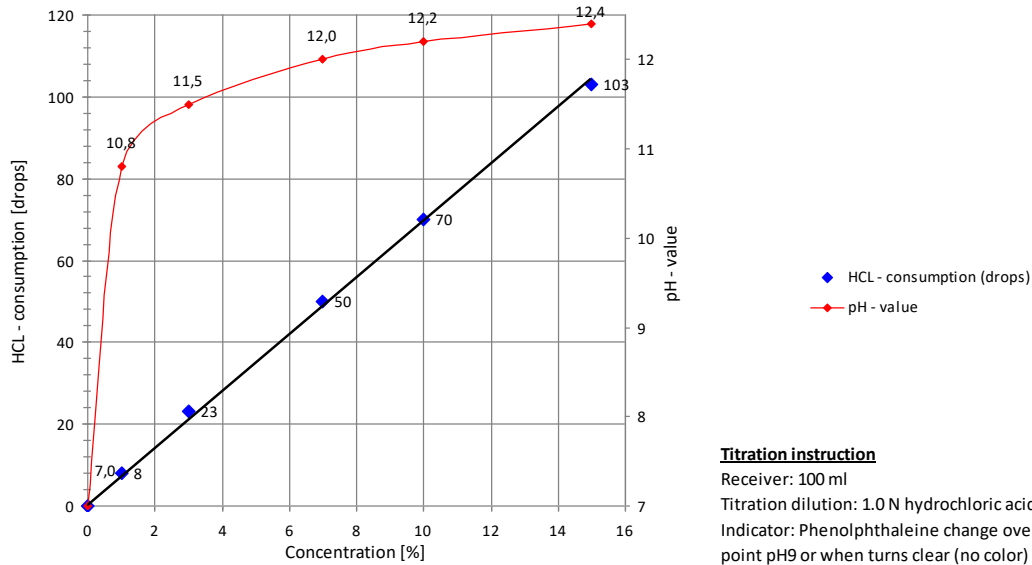

Titration instruction

Receiver: 100 ml
 Titration dilution: 1.0 N hydrochloric acid
 Indicator: Phenolphthaleine change over point pH9 or when turns clear (no color)
 Droppers: 0.04 ml per drop

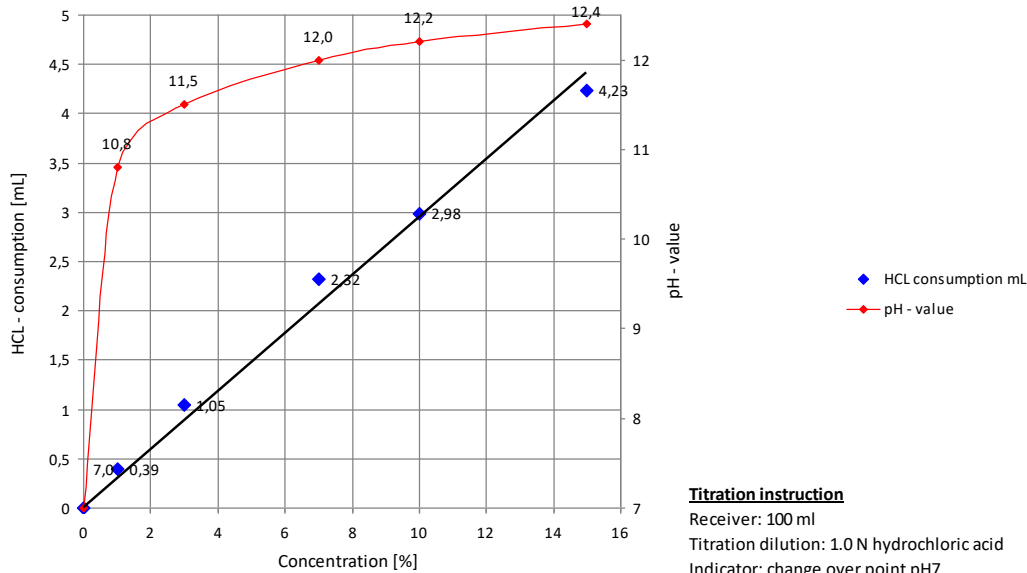

Titration instruction

Receiver: 100 ml
 Titration dilution: 1.0 N hydrochloric acid
 Indicator: change over point pH7

(M)SDS available upon request or visit our web site at www.walter.com

Not for product specification. The technical data contained herein is intended as reference only and may change without notice